



PROGRAMMING GUIDE ECE800 ELECTRIC PRESSURE FRYER



	G	=<	5

Control Panel ECE800 ELECTRIC PRESSURE FRYEF



Indicator Light (No)		Instruction for Use	Button (Serial Number)	Instruction for Use
1		Control Display Window	í	Information view key
2	WAIT	Waiting Indicator		Parameter setting minus key
3	READY	Done Indicator		Parameter setting plus key
4	SSS • HEAT ON	Heating Indicator	Р	Programming key
5	PR. PRESSURE ON	Pressure Indicator Light		Set the right key
			IDLE	when working, long press this key to enter idle mode; when melting oil, long press this key to enter cleaning mode
			1	Program group key

Programming

- MAKE SURE THERE IS OIL IN THE COOKING CHAMBER
- 1. Press and Hold the **P** button for 2 seconds The controller displays
- 2. "PROG ENTER CODE".
- 3. Enter the password "123" to enter the parameter settings.
- 4. Press **P** button once
- 5. Press either of the Arrow buttons <u>to</u> change the letters on the name, once the letter has been selected press the **P** button to move the letter editing along.
- 6. Press P to move to the next section PRE LOAD leave at 0.00
- 7. Press P to move to 1 TIME AT, using the arrow keys put in the value needed.
- 8. Press **P** to move to **1 TEMP**, using the arrow keys to put in the value.
- 9. Press P to move to 1 PRESSURE, using the arrow keys change to YES or NO. Check the customer's preference.
- 10. Press **P** to move to **2 TIME AT**, using the arrow keys to put in the value.

*This will open up a Temperature setting, a Pressure setting and a 3rd level of programming, just like 1 section





Programming ECE800 ELECTRIC PRESSURE FRYER



12345 67890

12345 67890

12345 67890

ا

) 🛋 🔽 🛈

· 🛈 💌 🛋 🖻

-0 🔽 🖪 📳

Cod	е	Illustrate - Meaning	Code	Illustrate - Meaning	
NAM	NAME Program Name QUAL TIME		QUAL TIME	Quality time	
PRE-LOAD		Preheat Time	LOAD COMP	Temperature compensation sensitivity (taking LCOMP REF as the reference point, if the actual temperature is lower than the compensation point temperature, the timing will slow down; if the actual temperature is higher than the compensation point temperature, the timing will be accelerated)	
TIME AT		Operating Hours			
TEMP		Operating Temperature			
PRESSURE Pressure Selection LCOMP REF Temperature co		Temperature compensation point			
2 TIN	1E AT	A total of 10 programs can be set	IDLE MODE	Whether to switch to idle mode at the end of the program	
ALARM-1Alarm prompt - reminder type Up to 4 can be set: 5 alarm types in totalFILTER INCWhen the oil filter is parameter FILTER IN times of oil filtering; mode, set the param Times.		When the oil filter is in GLOBAL mode, set the parameter FILTER INCL to select the number of times of oil filtering; when the oil filter is in MIXED mode, set the parameter FILTER AFTER how many Times.			
No	No Instruction			Image	
11.	Press P to move to ALARM-1 AT , check the customers preference, if no suggestion leave on 0.00 .				
12.	2. Press P to move to, ALARM-1 TY TIME , leave this as the displ shows.		his as the display:		
13.	3. Press P to move to ALARM-2 AT , leave this at 0.00 .				

14.	l	Press P to move to QUAL TIME, leave this at 0.00.

- 15. Press P to move to LOAD COMP, check the customers preference, or leave as OFF.
- 16. Press P to move to LCOMP REF ----, leave this as the display shows.
- Press P to move to IDLE MODE, using the arrow keys change 17. YES or NO, depending on the customers preference.
- 18. Press P to move to FILTER AFT, using the arrow keys set the value of filtering after cooks, check with the customers preference.

19. Press P to move to ALL HEAT, leave this as the display shows 0.

12345 67890 19 IDLE 12345 67890

14

15

17

18

IDLE.

IDLE

IDLE

IDLE

20. Press **P** to move the display to the beginning.



To Change temperature Reading from Celsius to Fahrenheit



No	Instruction	Image
1.	With the unit is displaying OFF in the display window.	
2.	Press P button for 5 seconds, and the controller displays level - 2 briefly, next, enter the password 1,2,3 .	
3.	Use the arrow button to change from C to F or F to C .	
4.	Press and hold the P button to save the change.	
		<u>.</u>

To Add Filtration Parameter to Program building if not Present For the Pressure Fryer PFE-800

No	Instruction	Image
1.	With the unit is displaying OFF in the display window.	
2.	Press P button for 5 seconds, and the controller displays level - 2 briefly, next, enter the password 1,2,3 .	
3.	Use P button to scroll down SP-5, and use the arrow buttons to change to MIXED	
4.	Press and hold P button to save the change.	3 E - F 3 4 5 1 3 4 5 1 2 8 4 5 6 7 8 1 2 8 4 5 6 7 8 6 7 8 6 7 8 6 7 8 6 7 8 6 7 8 6 7 8 6 7 8 6 7 8 6